

Echo 7 Cleaning Cartridge Instructions

READ BEFORE YOU START: Your cleaning cartridge is a **one-time use** cartridge. If it is not done correctly, cleaning will be ineffective. To ensure that your Echo 7 gets the best cleaning, **READ** and **UNDERSTAND** the instructions below.

- 1 Remove the O-Ring of the bottom insert on the Cleaning Cartridge.
- 2 Remove the main filter. Install a cleaning cartridge in place of the main filter.
- 3 Run **filtered** water only until the water comes out the top of the machine and then let the machine sit for 2 hours.
- 4 Replace the main filter. Run filtered water through the machine for 3 minutes.