





Echo 9 Ultra Cleaning Cartridge Instructions

READ BEFORE YOU START: Your cleaning cartridge is a **one-time use** cartridge. If it is not done correctly, cleaning will be ineffective. To ensure that your Echo 9 Ultra gets the best cleaning, **READ** and **UNDERSTAND** the instructions below.

-  1 Remove the main filter. Install a cleaning cartridge in place of the main filter.
-  2 Access the PWM settings by pressing the settings button for a few seconds. (You do not need water running through the machine to access the power settings) A hidden screen will open.
-  3 Write down the power settings for Level 4 alkaline and Level 4 acid (this will enable you to set them back after the cleaning process is complete).
-  4 After writing down the numbers of the power settings, turn down the power settings (using the + and -) for level 4 alkaline and level 4 acid levels to the lowest level they will go.

- 5 After installing the cleaning cartridge, start the system in **H2** water mode and run the machine only until the water comes out the top of the machine or for 15 seconds and then press the power button to turn off the water flow.
- 6 Let the machine sit for 2 hours.
- 7 Run **H2** water through the machine for 3 minutes.
- 8 Replace the main filter.
- 9 Go back into the PWM settings (step 2 above) and set the Level 4 alkaline and acid settings to the original they were before you lowered them for the cleaning process.